

11kV earth kits are supplied with spring loaded snap on clamps as standard. 3 phase leads are connected to the earth lead via central cluster star point, a cluster bar is available as an alternative.

Where safety rules dictate that the crossarm should also be earthed an additional phase lead with CE10 crossarm clamp can be added to the star point or cluster bar. If more convenient, the crossarm lead can be supplied as a separate item with the CE10 clamp one end and a CE62 snap on clamp at the other end. In some circumstances a separate 6m bond lead is requested with S9AH clamps each end.

## 11kV Earths



CAT NO	DESCRIPTION
<b>11-EARTH</b>	11kV Earthing Set with 3 x snap-on conductor clamps, 3 x 3 metre 120mm <sup>2</sup> Aluflex phase leads connected to central cluster bar, 1 x 15 metre 50mm <sup>2</sup> Aluflex earth lead and 1 x earth end clamp. Clamps are tested to 12.5kA for 1 second.
<b>11-EARTH-SC-CL</b>	As above but with 3m crossarm bond lead and CE10 clamp attached



## Crossarm Bond Leads

Where required we can offer the Crossarm Bond Lead separately.



CAT NO	DESCRIPTION
<b>CBL-6210</b>	1.5m orange 50mm <sup>2</sup> Aluflex with CE62 snap-on clamp one end and CE10 crossarm clamp other end
<b>CBL-6M-2X-S9AH</b>	6m orange 50mm <sup>2</sup> Aluflex with S9AH clamps each end (one grey, one yellow)